Instructions For Use

Proper inflation is necessary to use this product and is explained in 8 easy steps!

Inflating the Inner Grid and the Outer Ring

1. The inner grid should be inflated orally with about two large breaths of air for an average person. Do not use more air, two breaths is all that is needed. Close the valve.



2. Bunch up the SSR and move the contained air around to separate both layers of plastic. The SSR cannot be made to lie flat unless the layers are separated.





3. The SSR should be about the size of a soccer ball when bunched up.




4. Inflate the outer ring orally until it is firm.

5. Close the valve.
Place each SSR
single layer in direct
sunlight on a flat
non-abrasive surface
until the packing
lines relax.



6. This should take from 10 minutes to 30 minutes depending on the intensity of the areas not separated.

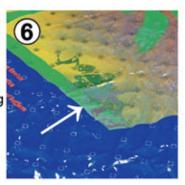

Instructions For Use Continued...

7. If the SSR still does not lie flat, measure the diameter. A properly inflated SSR is 60 inches or 152.4 cm in diameter.



 If the SSR is smaller, use the deflation tube provided to let air out of the inner grid until it lies flat.



Excessive air in the grid section, deep packing lines and failure to separate both layers of plastic will all cause the outer edge to curl and distort.







How To Use Solar Sun Rings™

Once the Solar Sun Rings are inflated, cover up to 70% to 80% of the surface of your pool with Solar Sun Rings by placing the blue colored side on the water. You should not cover more than 70% of the surface on deep pools and not more than 80% on shallow pools. For the best solar effect, keep the upper surface of the Solar Sun Rings clean and clear.

Care Of Solar Sun Rings™

Once inflated, proper care of this product will greatly extend its useful life. Pool decking is designed to be abrasive to prevent slips and falls. Do not walk on Solar Sun Rings™ or drag Solar Sun Rings™ on this abrasive surface. When Solar Sun Rings are not on the pool water, do not stack them in direct

For more information regarding Solar Sun Rings™, feel free to call us at 1-866-756-2704 at ext. 208 or visit our website, www.solarsunrings.com